


# ODU AMC HIGH-DENSITY PROTECTIVE CAPS ASSEMBLY INSTRUCTION

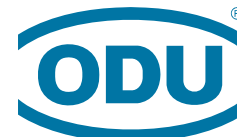

A PERFECT ALLIANCE.



1. Cut the lanyard before knot to desired length.



2. Depending on the version crimp lanyard with crimp barrel or ferrule with tool.

## 2.1 Crimp tool ODU

Hand-crimptong	
Size	Part number
all	080.000.061.000.000

## 2.2 Crimp range

Part	Tool adjustment
Cable lug	0.25 - 1.5
Crimp ferrule	0.25 - 1.5

