

ODU AMC® EASY-CLEAN ADDITIONAL LOCKING KIT




- 1. Push clip (pos. 20) on In-Line-Receptacle housing until it clicks into place.
- 2. Push sleeve (pos. 10) with pre-assembled O-Ring (pos. 40) on the In-Line-Receptacle housing until it clicks in to place. During this assembly step it is necessary to push the clip (pos.20) together for example with tweezers.
- 3. Fasten the panel mounted plug with the nut (pos. 30) and the definded locking torque (table below). The thread has to be secured with adhesive (e. g. Loctite 2701).


AMC [®] Easy-Clean Size	Part-ID	ODU-No.	Tightening torque
Size 0	50286309	756.271.098.000.000	2.5 Nm
Size 1	50289064	756.271.098.001.000	4.5 Nm
Size 1.5	50289065	756.271.098.00A.000	4.5 Nm

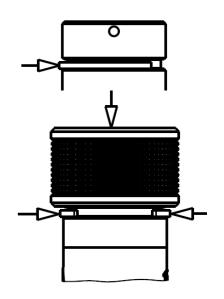

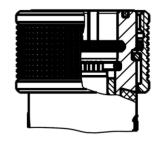

Delivery condition:

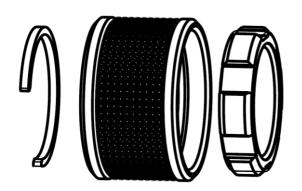

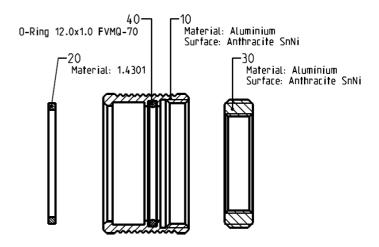

All Rights reserved, including possible patents or trademarks. Documents shall not be provided to a third party or duplicated in any form without prior written permission. This document is not managed.

Dok-Nr.: D00016038 / ODU-ID: 010.645.001.000.030 /-